

Cub Cadet®

ILLUSTRATED PARTS MANUAL

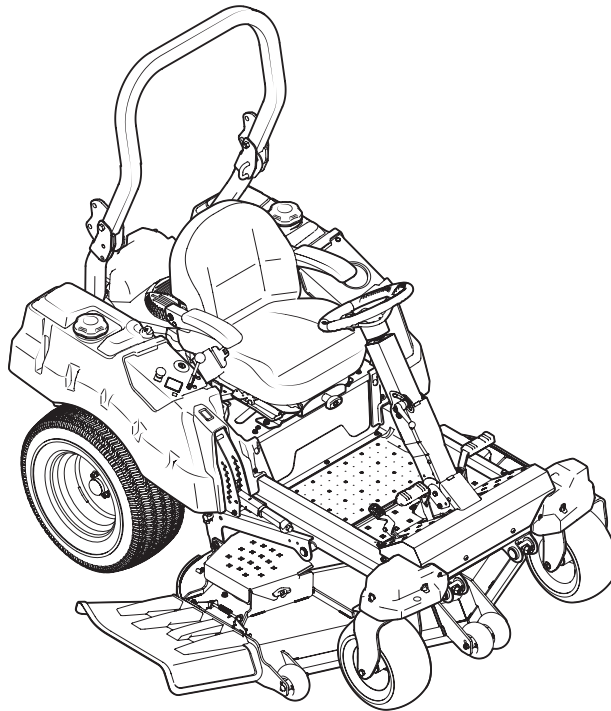

Pro Z 100 Steering Wheel

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Zero-Turn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Seat Assembly.....	4	Drive Assembly.....	16
Floorboard.....	5	Deck Lift Assembly.....	18
Operator's Platform.....	6	Engine Accessories (Kohler).....	20
Fuel Tank.....	8	48" Deck.....	22
Frame.....	9	54" Deck.....	24
Front Axle Assembly.....	10	Electrical.....	26
Steering Column & Pedal Controls.....	12	Electrical Schematic.....	27
Steering Linkage.....	14	Labels.....	28

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--


Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:


0637	Black	0685	Blue (Cub Cadet)
4021	Yellow (Cub Cadet)	0691	Black Jack (Cub Cadet Commercial)
0499	Beige (Cub Cadet)		

This page left intentionally blank.

Seat Assembly

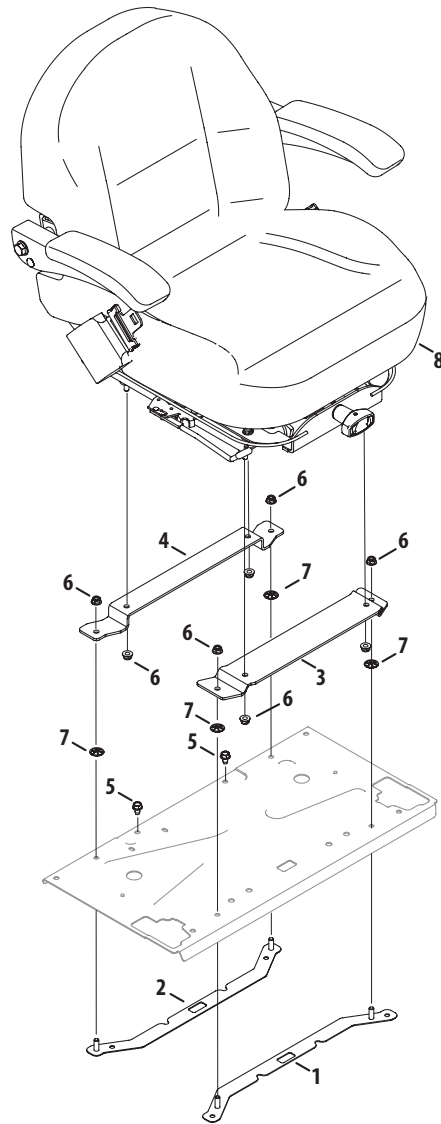


Ref.	Part Number	Description
1	603-05282	Seat Plate Assembly, FR
2	603-05283	Seat Plate Assembly, RR
3	703-10051A	Front Seat Bracket
4	703-10052A	Rear Seat Bracket
5	710-0607	Screw 5/16-18 x .500
6	712-04063	Flange Lock Nut, 5/16-18
7	926-04012	Push Nut
8	757-05053	Seat

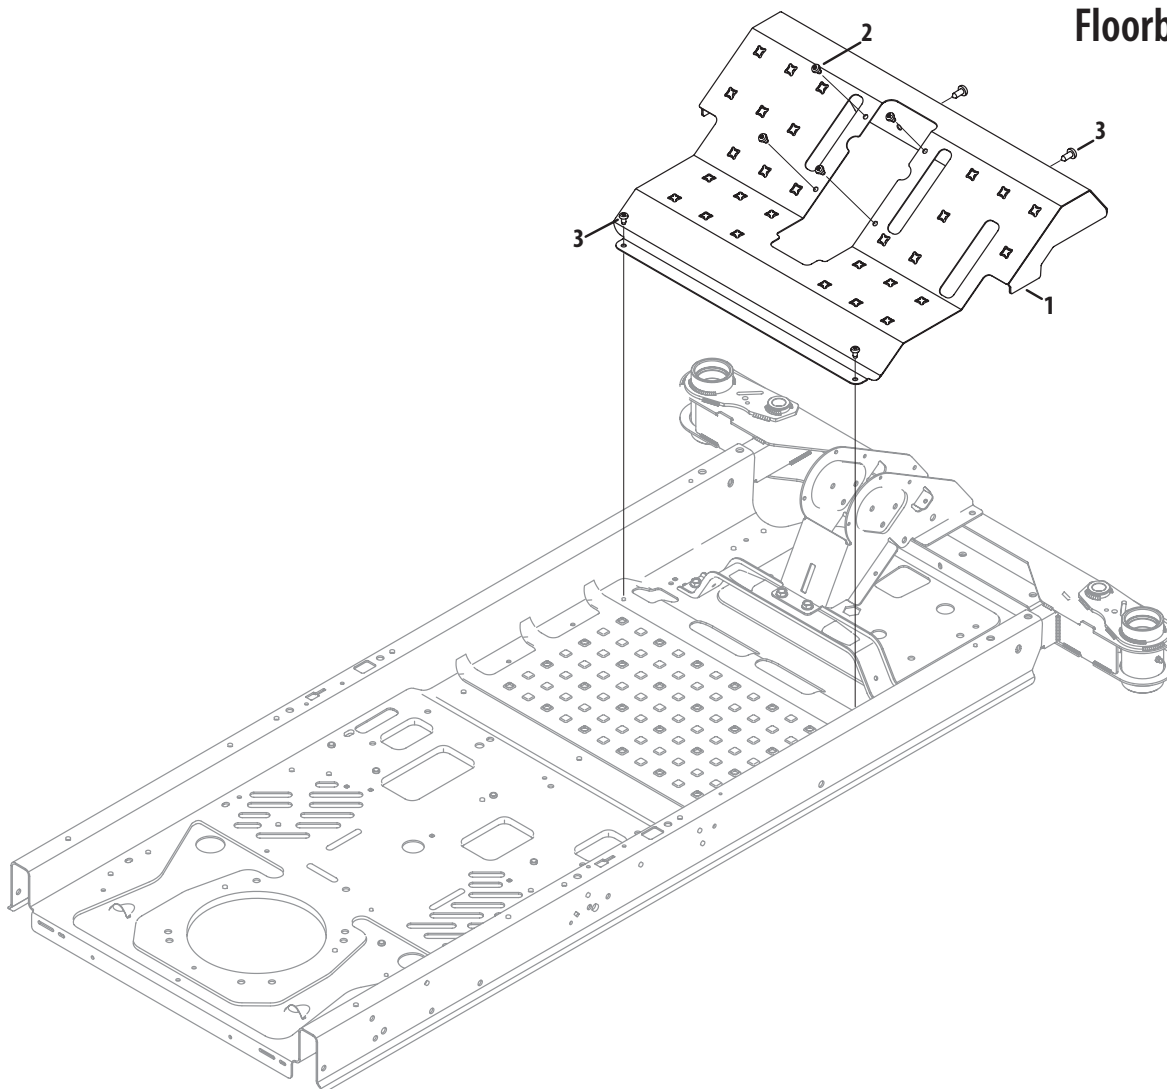


Ref.	Part Number	Description
1	703-10571	Floor Board
2	710-04483	Screw, 1/4-20 x .5
3	710-05424	Self Tapping Screw, 5/16-18 x .750

Operator's Platform

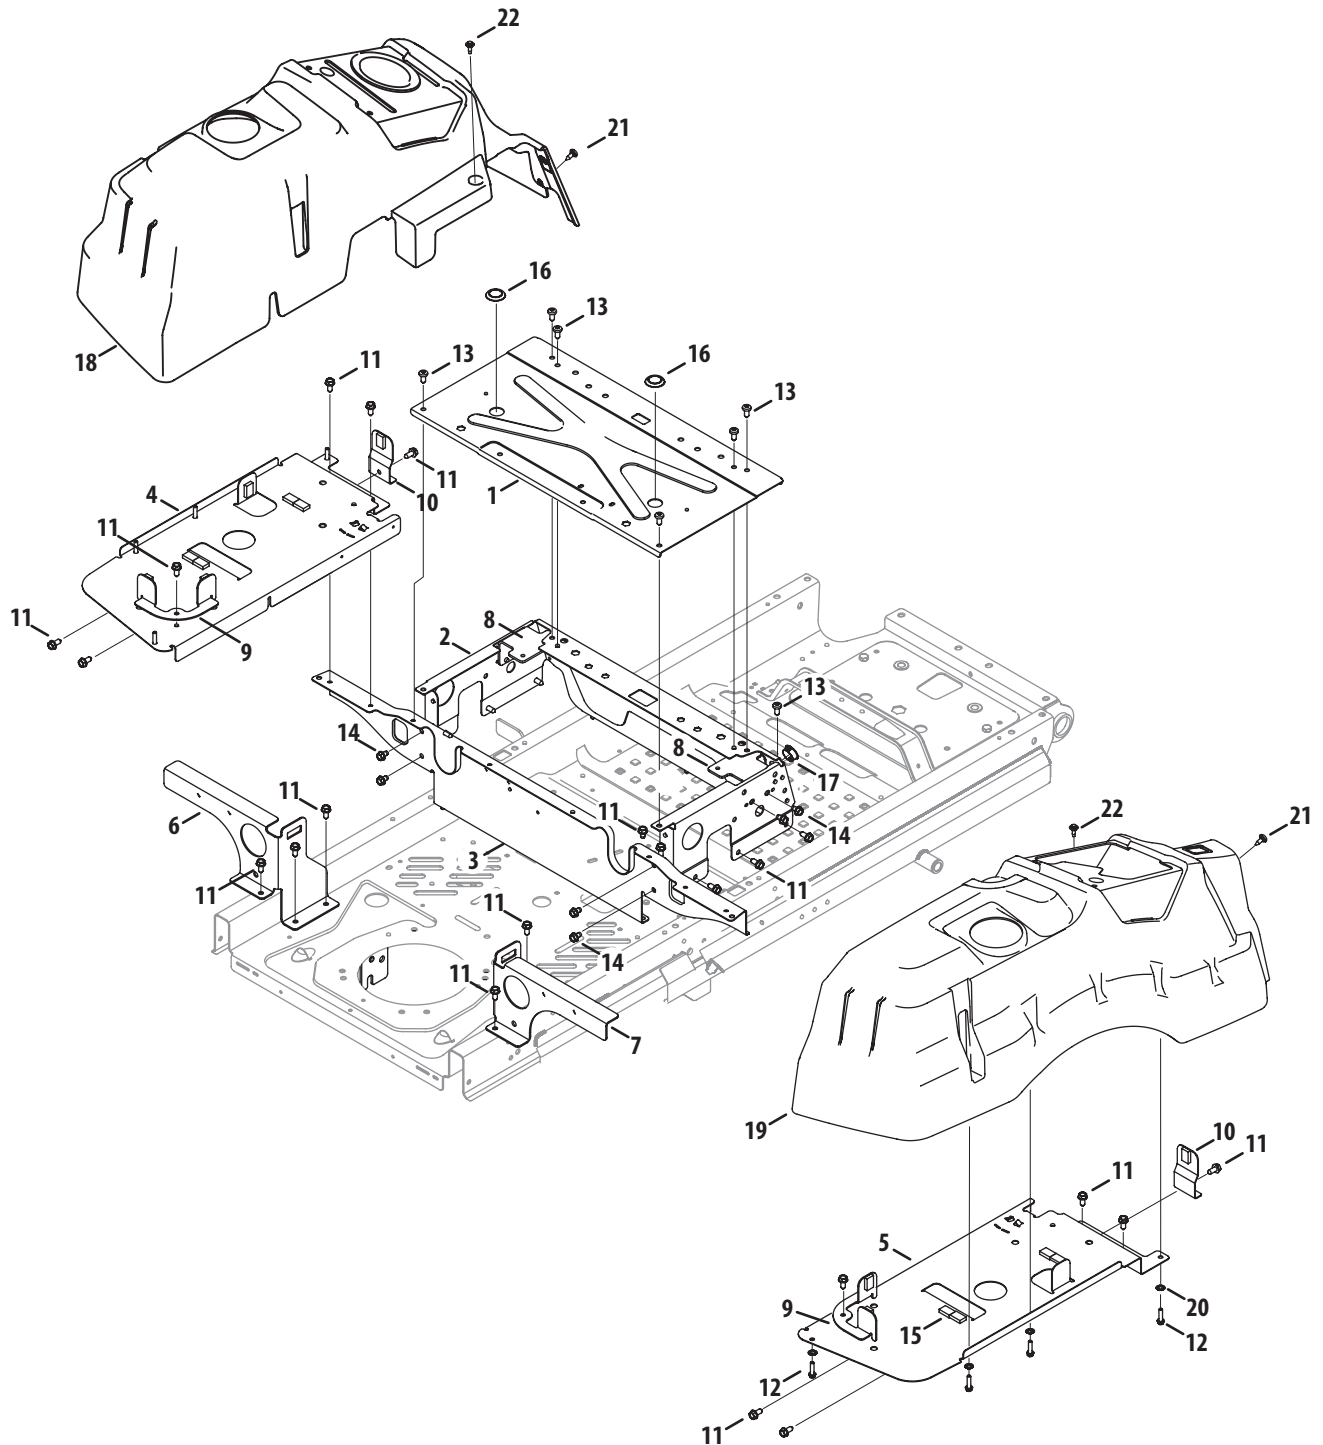


Ref.	Part Number	Description
1	703-09186F	Seatbox Top Plate
2	703-09320A	Seat Frame
3	703-09332A	Rear Seatbox Brace
4	703-10142A	LH Tank Support Pplate
5	703-10143A	RH Tank Support Plate
6	703-10312	LH Rear Bracket Sepport
7	703-10313	RH Rear Bracket Support
8	703-10365	Seat Box Bracket
9	703-10388A	Rear Tank Bracket
10	703-10460A	Front Tank Bracket
11	710-04484	Hex Washer Screw 5/16-18 x .750
12	710-05109	Screw 5/16-14 x 1
13	710-05424	Screw 5/16-18 x .750
14	710-0607	Screw 5/16-18 x .500
15	722-3022A	Foam Tape .625 Wide x .25 THK Bulk
16	726-3045A	Plug
17	731-09477	Plastic Plug
18	731-11219	LH Console Z-Style
19	731-11220	RH Console Z-Style
20	736-0607	Lock Washer, 5/16
21	738-04549A	Torx Shoulder Screw 1/4-20
22	738-05090	Shoulder Screw M6-1 .368 X.115

Fuel Tank

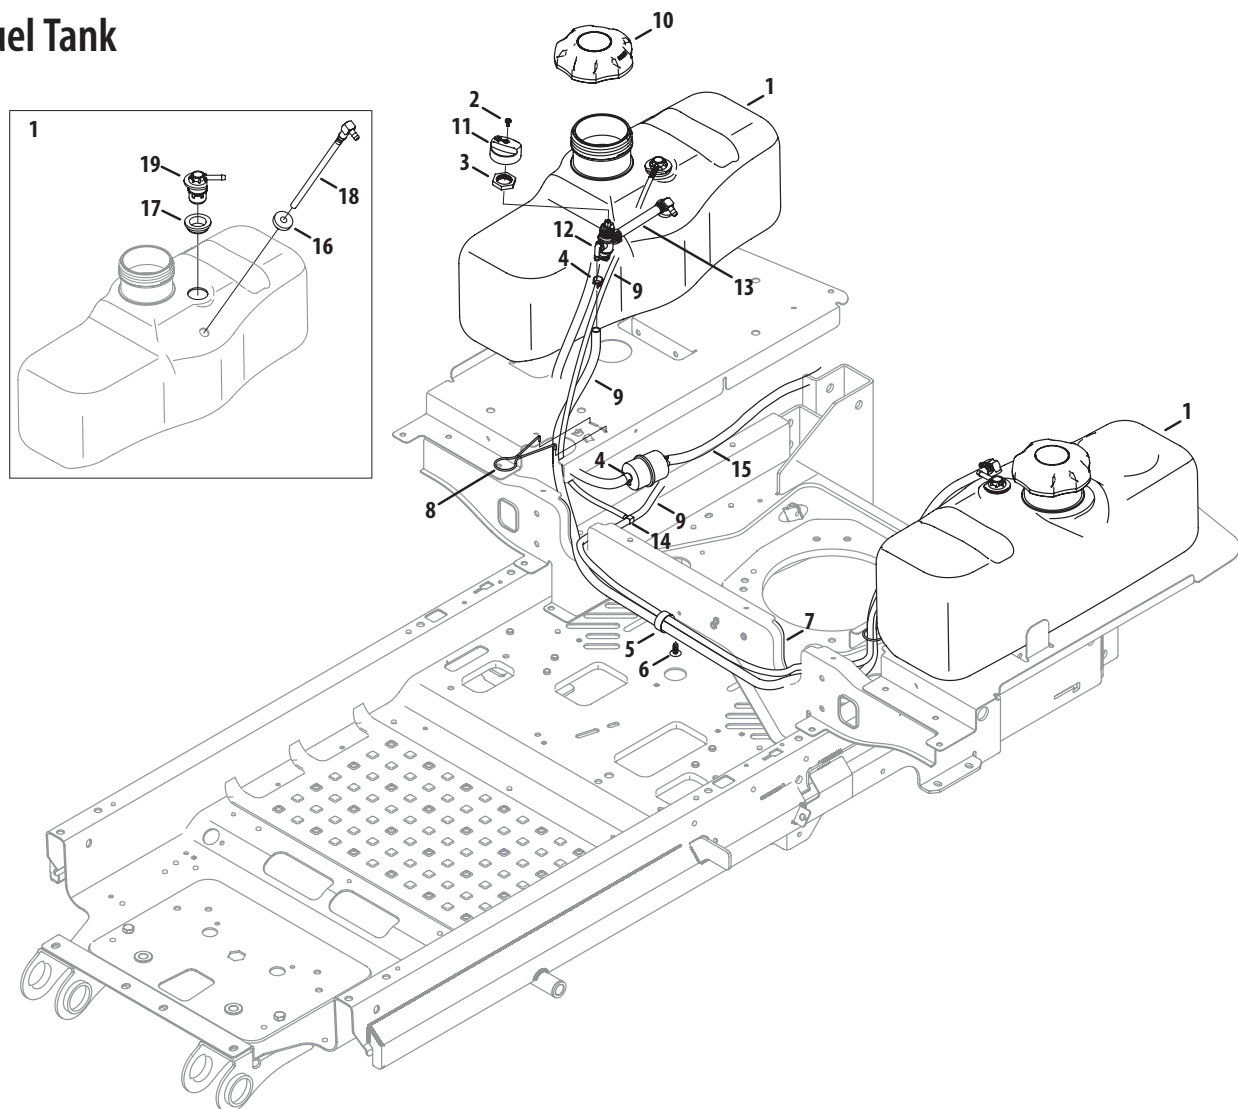


Ref.	Part Number	Description
1	951-05301A	Fuel Tank 3.50 GAL
2	710-06152	Screw-M4-0.7 x 8MM
3	712-05048	3 Way Select Nut
4	726-0205	Hose Clamp 1/20
5	726-04119	Drain Hose Clamp
6	726-3046	Ratchet Clip .250
7	731-0511	Trim Strip
8	747-06306	Tank Support Rod
9	751-10349-72	Fuel Hose, 1/4
10	951-12725	Fuel Cap 3.5 w/Tether"

Ref.	Part Number	Description
11	951-14488	Fuel Cap 3 Way
12	751-14526	3-Way Fuel Select Switch
13	751-14738	Fuel Hose Low Permeation
14	737-04341	Tee Fitting, Fuel
15	751-12089-70	Vent Hose
16	935-0149	Fuel Tank Bushing
17	735-04081	Rubber Grommet
18	751-10442	Fuel Pickup Fitting
19	751-12118	Rollover Valve

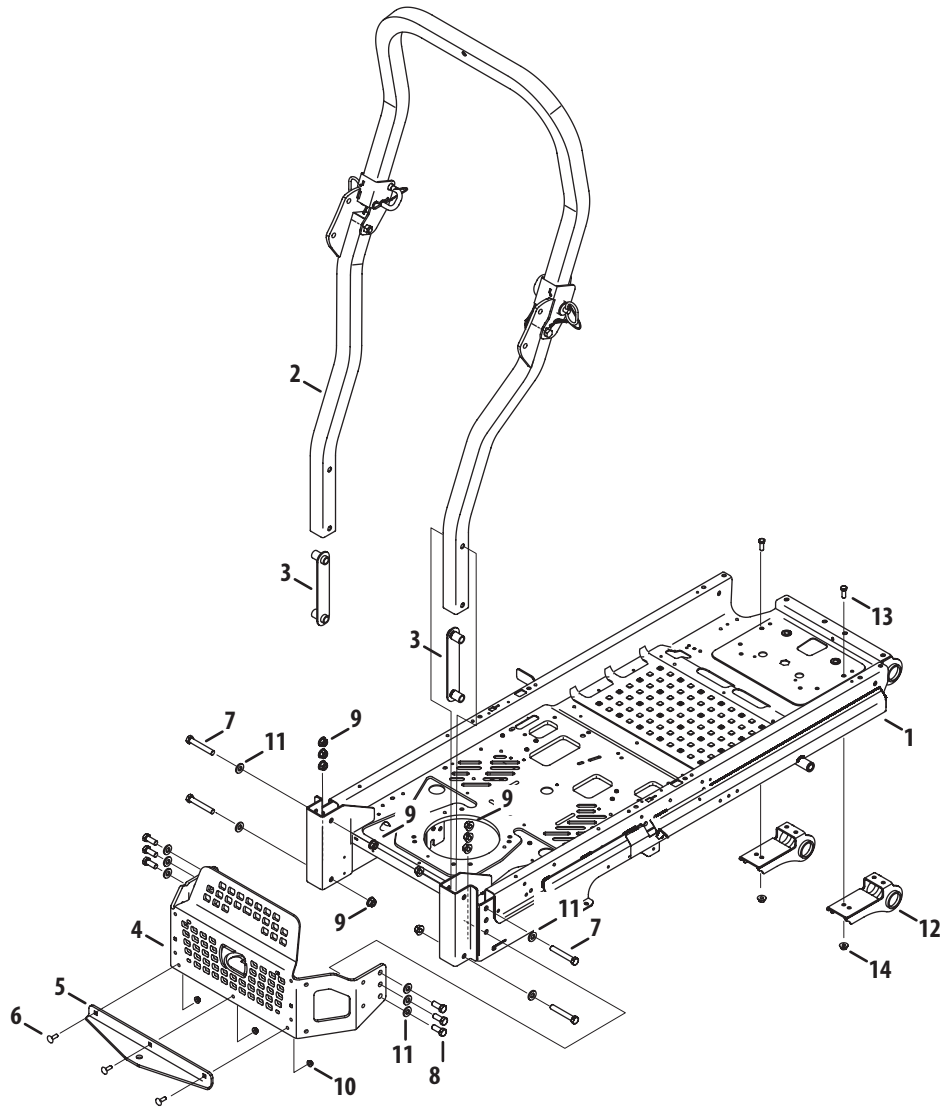


Ref	Part Number	Description
1	603-05238A	Frame Assembly
2	603-05240A	Folding Rops
3	703-10257	Rear Bumper
4	703-10333	Hitch Bracket
5	710-04998	Screw 5/16-18 x 1.00 GR5
6	710-1806	Screw 1/2-13 x 3.25 GR5
7	710-3032	Screw 1/2-13 x 1.25 GR5
8	712-04150	Nut
9	712-04339	Flange Nut
10	936-0272	Flat Washer .510 x 1.00 x .060
11	736-3019	Flat Washer .531 x 1.060 x .134
12	N/A	Deck Hanger Bracket
13	710-0514	Screw 3/8-16 x 1 GR5
14	712-04217	Flange Lock Nut

Front Axle Assembly

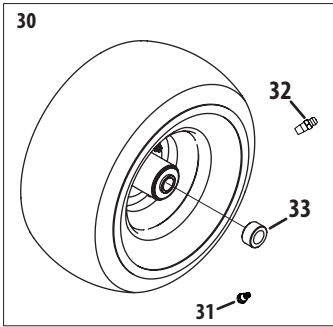

Ref.	Part Number	Description
1	603-05267	Front Caster Bracket Assembly
2	903-05275	Front Axle Assembly, includes
—	737-04345	Grease Zert 1/4-28
3	703-10384	Axle Grease Cap
4	703-10602	Hold Down Bracket
5	703-10631	Front Axle Support Plate
6	710-0514	Screw 3/8-16 x 1 GR5
7	710-0521	Screw 3/8-16 x 3 GR8
8	710-06041	Screw 5/16-18 x .75 GR5
9	710-06045	Screw 3/8-16 x 2.25 GR5
10	710-06093	Screw 3/8-16 x 2.00 GR5
11	710-06508	Screw 5/16-18 x 1.25
12	711-06081A	Steering Gear Pivot Shaft
13	712-0359	Hex Nut Castle 3/4-16
14	712-04150	Nut
15	712-04217	Flange Lock Nut
16	912-3009	Hex Nut
17	714-0162	Cotter Pin-5/32 Dia.
18	717-04952	Steering Gear
19	717-05133	Steering Spur Gear 13T
20	721-04656	Seal
21	731-09291A	Axle Cover (RH)
22	731-09320A	Axle Cover (LH)
23	936-0344	Flat Washer
24	750-06085	Seal Ring
25	738-04549A	Torx Shoulder Screw 1/4-20
26	738-05192A	Screw 1/2-13 x 8.5 GR5 Flg
27	741-05055	Roller Bearing 47MM x 25MM x 15MM
28	750-05351	Caster Axle Spacer
29	750-05352	Spacer .76 x 1.23 x 1.25
30	634-04623A-0931	Wheel Assembly (13 x 6.50-6)
31	934-0255	Tubeless Valve
32	937-0280	Grease Fitting
33	941-04137A	Brg-Ball .754 ID x 1.750 OD


Steering Column & Pedal Controls

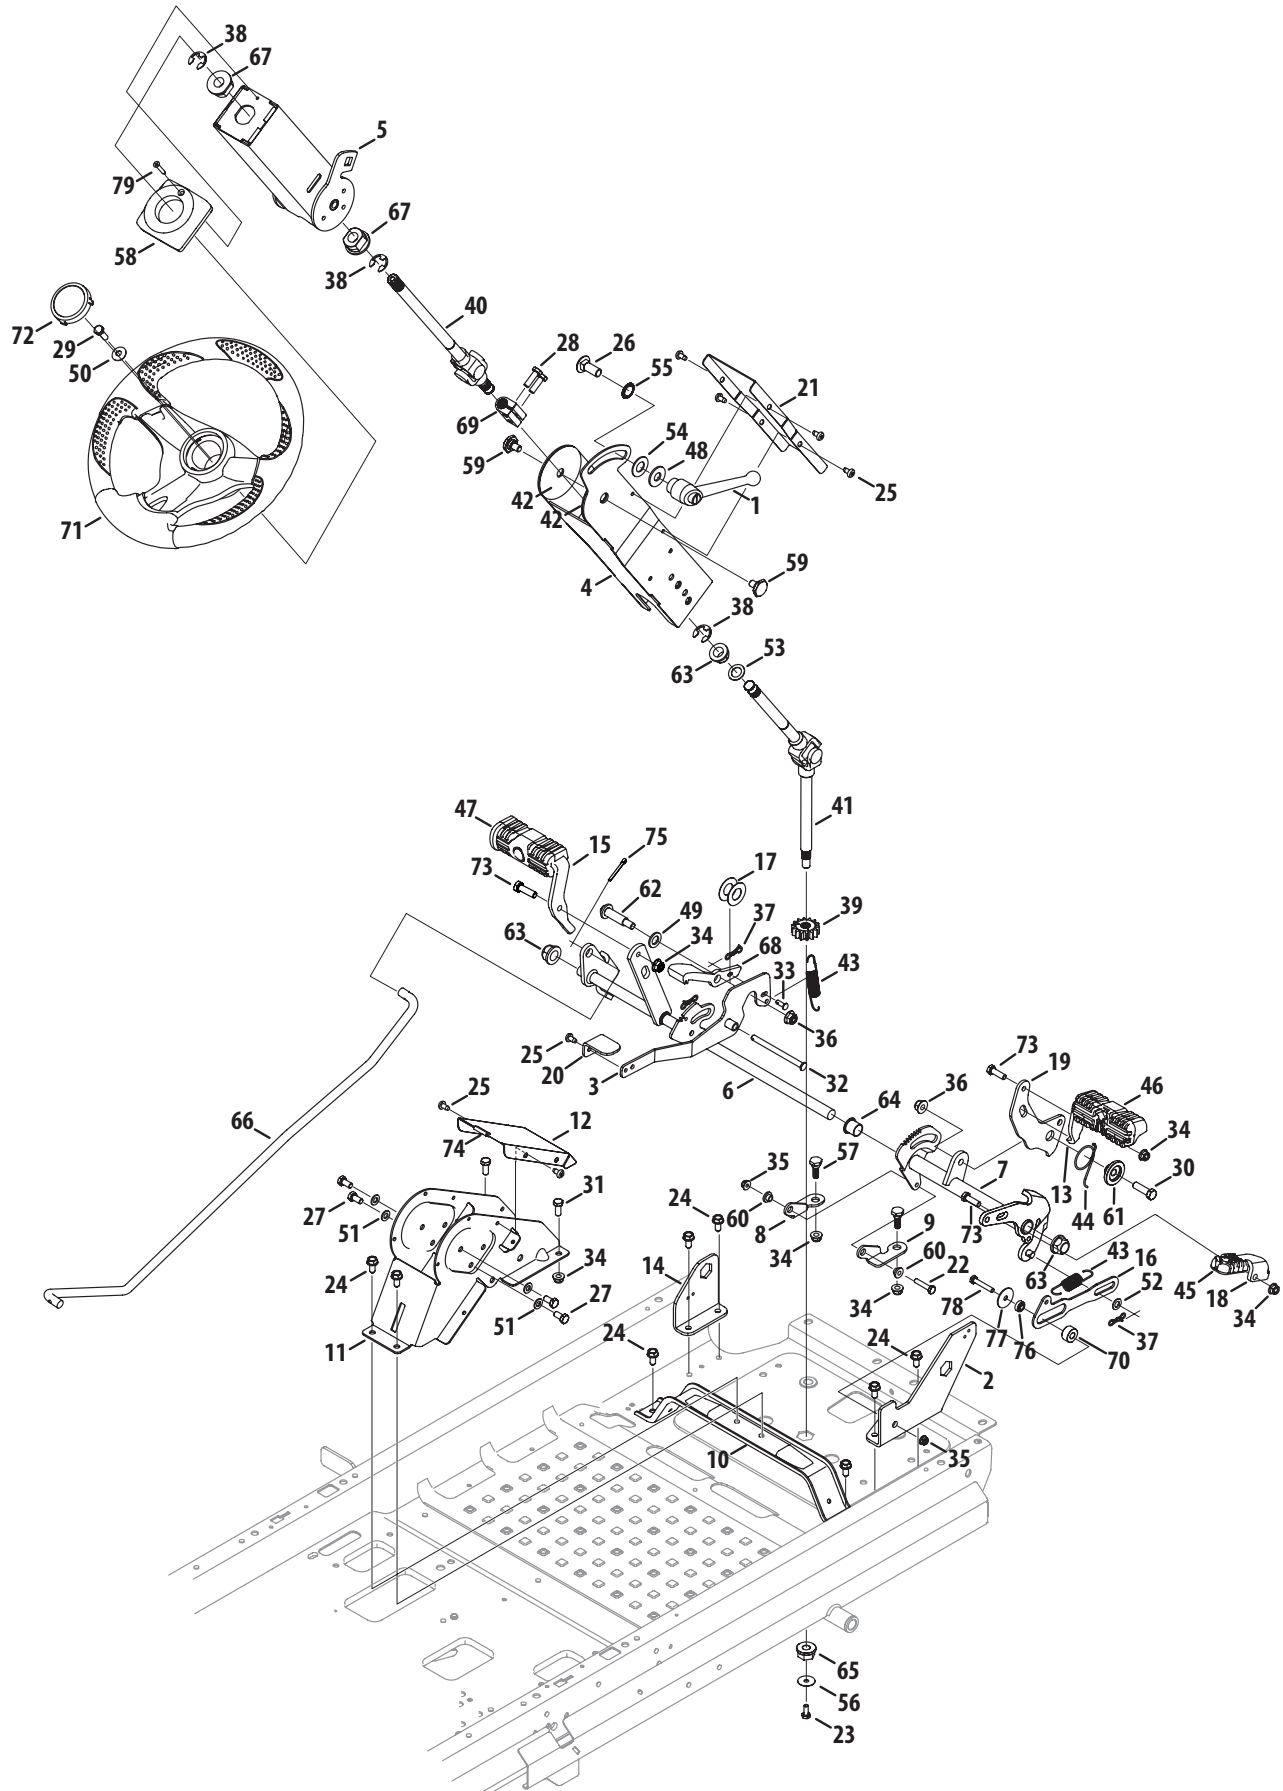

Steering Column & Pedal Controls


Ref.	Part Number	Description	Ref.	Part Number	Description
1	02005058	Steering Column Adjustment Lever	41	717-05248	Lower Steering Shaft
2	703-10408A	Support Bracket Assembly, RH	42	731-09831	Column Wear Plate
3	603-05040	Brake Pedal Assembly	43	732-04748	Extension Spring, .70 OD x 3.035 LG
4	603-05076	Lower Column Assembly	44	732-04949	Torsion Spring, 1.00 ID x .22
5	603-05128A	Upper Column Assembly	45	735-04117	Reverse Pedal Pad
6	647-05042A	Brake Pedal Assembly	46	735-04118A	Forward Pedal Pad
7	947-05087	Drive Pedal Assembly	47	735-04136	Brake Pedal Pad
8	703-08604	Speed Bracket, LH	48	936-0179	Washer, Flat, .531 x 1.25 x .100
9	703-08606	Speed Bracket, RH	49	936-0192	Flat Washer, .535 x .930 x .090
10	703-08620A	Steering Support Bracket	50	736-0242	Bell Washer, .340 x .872 x .060
11	703-10573	Lower Steering Wheel Column	51	936-0264	Flat Washer, .330 x .630 x .064
12	703-10582	Lower Column Cover	52	936-0314	Thrust Washer, .375 x .700 x .030
13	703-08646B	Drive Pedal	53	936-0337	Flat Washer, .634 x 1.00 x .040
14	703-08656	Support Bracket, LH	54	736-04602	Washer, .640 x 1.25 x .050
15	703-08675A	Brake Pedal	55	936-0760	Lock Washer, 17 x 23.8 x 1.95
16	903-09837A	Return to Neutral Link	56	736-3092	Flat Washer, .265 x 1.00 x .030
17	936-0351	Shim Washer, .76 x 1.50 x .030	57	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
18	703-08694B	Reverse Pedal	58	731-11491	Steering Column Cover
19	703-10338A	Forward pedal Bracket	59	738-04130A	Shoulder Screw, 3/8-16 x .625 x .175
20	703-09147	Tilt Steering Pedal	60	738-04483	Shoulder Spacer, .375 x .625 x .20
21	703-09279	Steering Column Cover	61	738-04552B	Shoulder Spacer, 1.50 x 1.00 x .623
22	710-0106	Hex Head Screw, 1/4-20 x 1.25	62	738-0929	Shoulder Screw, 3/8-16 x .496 x 1.445
23	710-0433	Hex Head Screw, 1/4-20 x .625	63	941-0225	Hex Flange Bearing
24	710-04484	Hex Washer Screw, 5/16-18 x .750	64	741-0495	Flange Bearing, .63 ID x .695 OD x .06
25	710-04483	Screw, 1/4-20 x .5	65	741-05052	Hex Flange Bearing, 7/16
26	710-05375	Carriage Bolt, 1/2-13 x 1.25	66	747-05654A	Front Brake Rod
27	710-0538	Hex Screw, 5/16-18 x .625	67	948-0209	Flange Bearing, .63 ID x 1.50
28	710-0643	Hex Cap Screw, 5/16-18 x 1.00	68	748-04203	Cruise Latch
29	710-1245B	Hex Screw, 5/16-24 x .875	69	748-05045	Steering Shaft Coupling
30	710-3005	Hex Screw, 3/8-16 x 1.25	70	750-06497	Spacer, .267 ID x 1.00 OD x .36
31	710-3008	Hex Screw, 5/16-18 x .75	71	631-04008B	Steering Wheel Assembly
32	711-05068A	Clevis Pin, 5/16 x 4.135	72	731-04039	Steering Wheel Cap
33	711-05670	Clevis Pin, .224 Dia. x .625	73	710-0376	Hex Cap Screw, 5/16-18 x 1.00
34	712-04063	Flange Lock Nut, 5/16-18	74	731-0511	Trim Strip
35	712-04064	Flange Lock Nut, 1/4-20	75	714-0162	Cotter Pin, 5/32 x 1.25
36	712-04065	Flange Lock Nut, 3/8-16	76	741-04425	Ball Bearing, .250 x .625
37	714-04040	Bow-Tie Cotter Pin, 72	77	936-0211	Flat Washer
38	916-0231	E-Ring, .750	78	710-0606	Hex Cap Screw, 1/4-20 x 1.5
39	717-04960	14-Tooth Spur Gear	79	710-1331	Screw, #10-16 x 1.25
40	717-05247	Upper Steering Shaft			

Steering Linkage

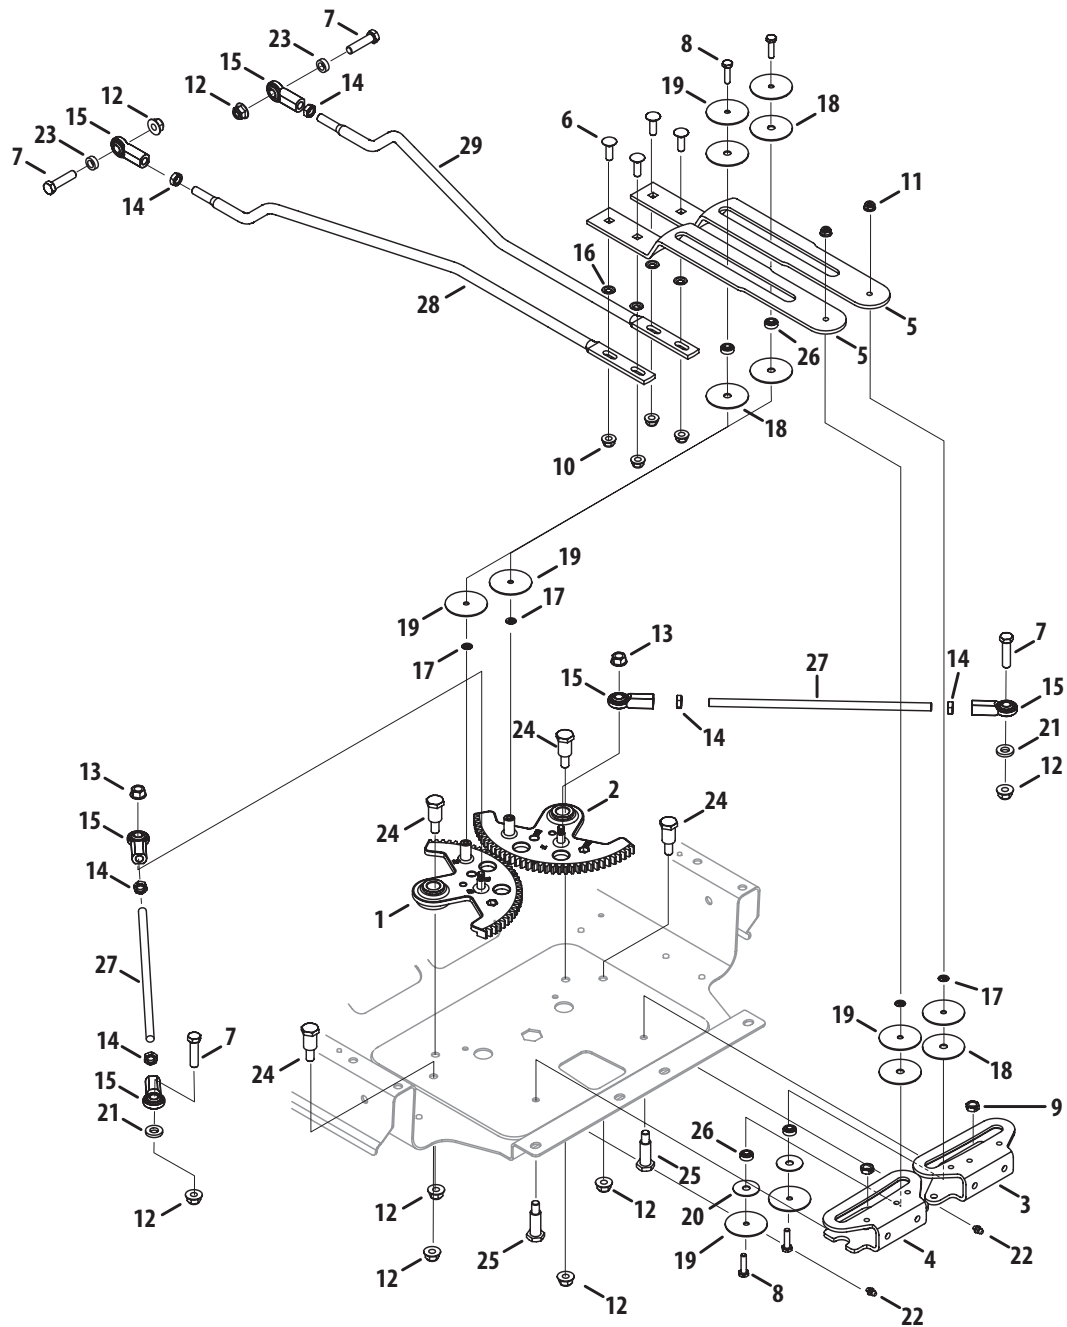

Ref.	Part Number	Description
1	917-05039	Steering Gear Assembly, RH
2	917-05040	Steering Gear Assembly, LH
3	703-08882A	Speed Cam Plate, LH
4	703-08883A	Speed Cam Plate, RH
5	703-10404	Control Link
6	710-0276	Carriage Screw, 5/16-18 x 1.00
7	710-0520	Hex Screw, 3/8-16 x 1.50
8	710-3220	Hex Screw, 1/4-20 x 1.00
9	712-0266A	Nut, Jamlock, 3/8-16
10	712-04063	Flange Lock Nut, 5/16-18
11	712-04064	Flange Lock Nut, 1/4-20
12	712-04065	Flange Lock Nut, 3/8-16
13	712-04339	Nut, 5/16-18, Centerlock
14	712-0711	Jam Nut, 3/8-24
15	723-04080	Female Ball-Joint
16	726-0201	Speed Nut, .3125 ID
17	726-0233	Push Nut, .25 ID x .50 OD
18	736-04630	Flat Washer, .356 x 2.00 x .060
19	736-04631	Flat Washer, .260 x 2.00 x .060
20	736-04639	Washer, .355 x 1.25 x .048
21	736-3010	Flat Washer, .407 x .812 x .135
22	737-04345	Grease Fitting, 3/16
23	950-0535	Spacer, .376 ID x .625 OD x .220
24	738-05046	Shoulder Screw, 3/8-16 x .625 x .875
25	738-1014	Shoulder Screw, .500 x 1.25 x 3/8-16
26	741-04425	Ball Bearing, .25 x .625
27	747-06130	Drag Link, .375 Dia.
28	747-06495	Hydro Link, RH
29	747-06496	Hydro Link, LH


Drive Assembly

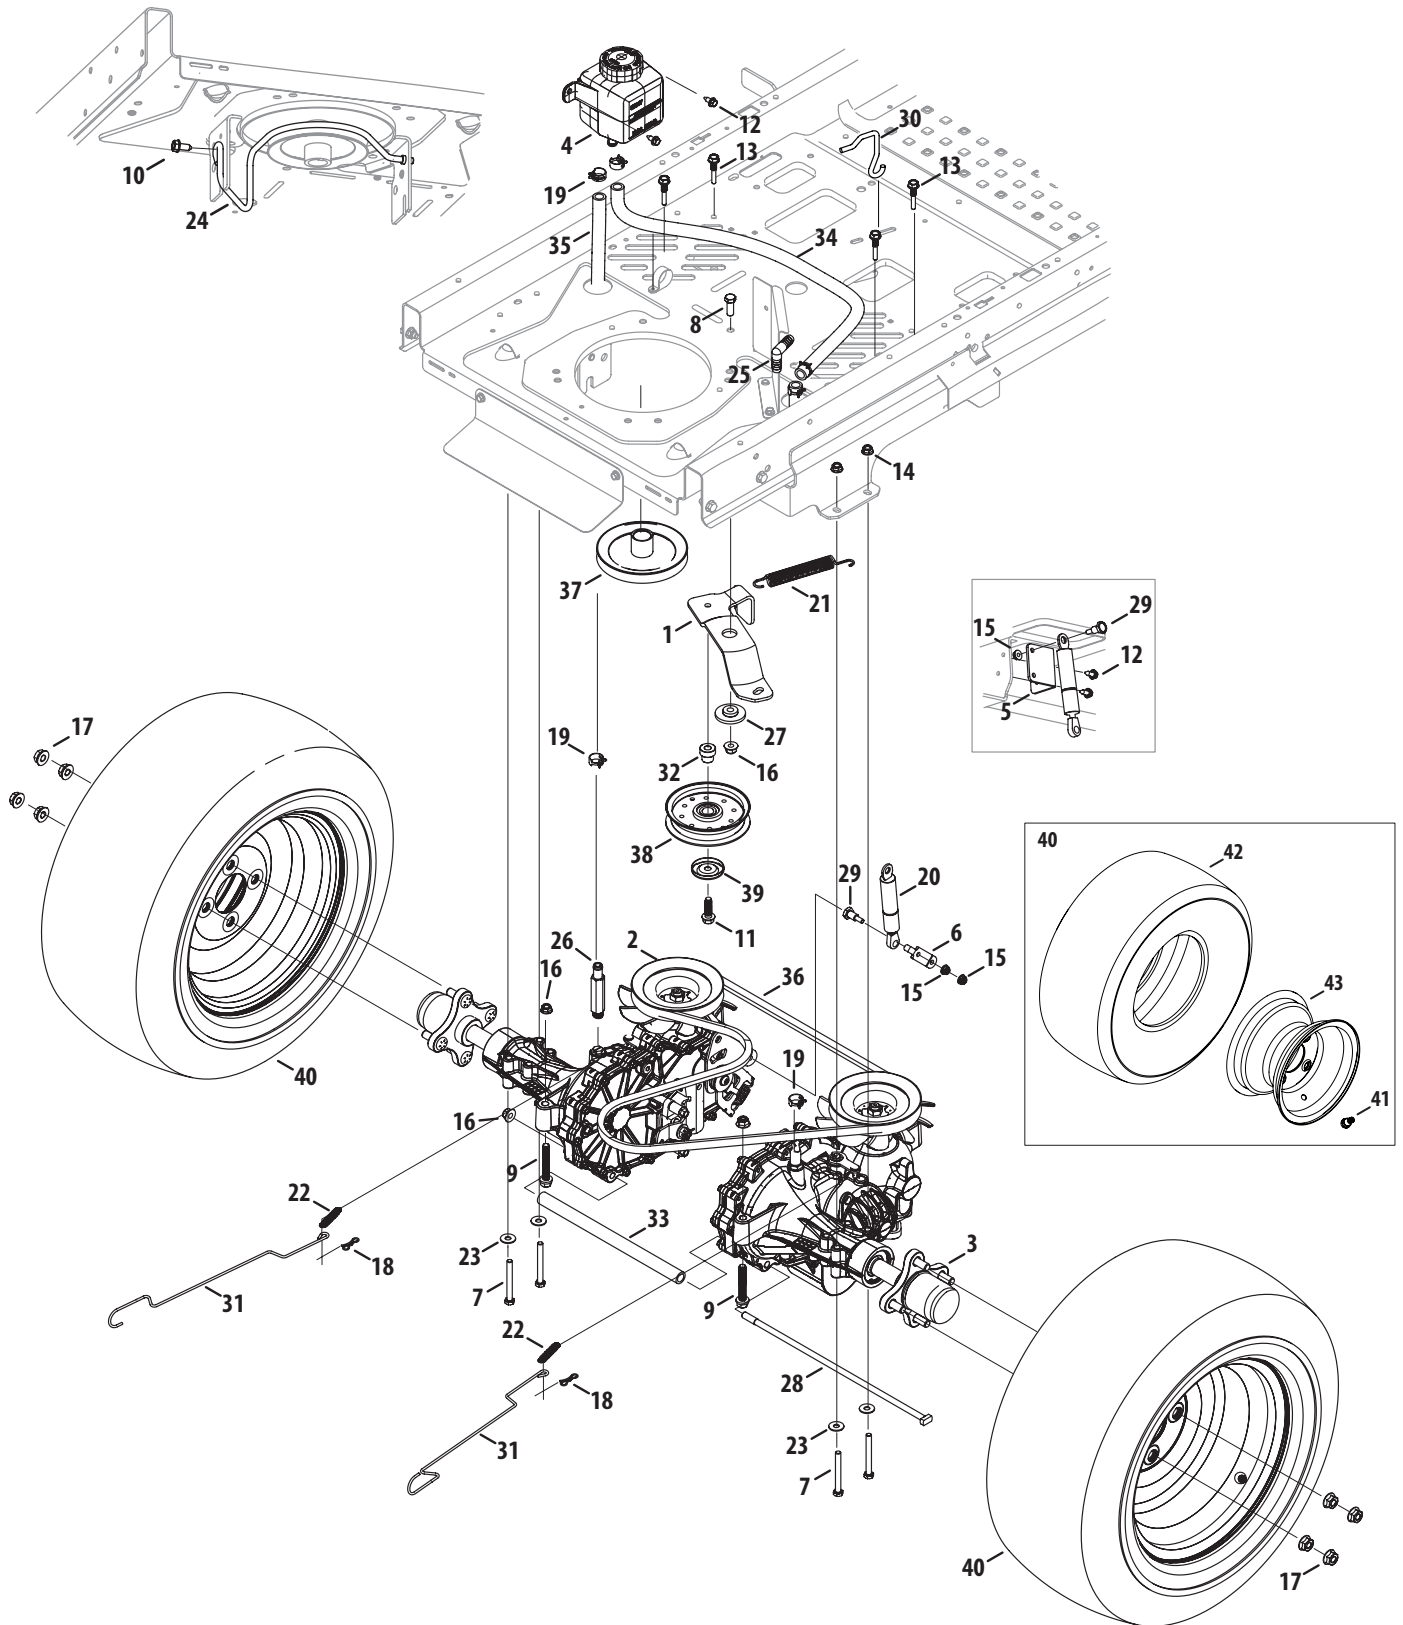

Ref.	Part Number	Description
1	903-05256	Idler Bracket Assembly
2	918-07112A	LH Transmission Assembly
3	918-07113A	RH Transmission Assembly
4	631-04286	Hydraulic Tank
5	703-10655	Frame Damper Mounting Bracket
6	703-10661A	Trans Damper Mounting Bracket
7	710-0176	Hex Screw 5/16-18 x 2.75
8	710-0514	Screw 3/8-16 x 1 GR5
9	710-06045	Hex Screw-3/8-16 x 2.5 GR5
10	710-04484	Hex Washer Screw, 5/16-18 x .750
11	710-1315	Screw 3/8-16 x 1.250
12	710-1652	Screw 1/4-20 x .625
13	711-06112	Belt Keeper Rod .25 x 1.585
14	712-04063	Flange Lock Nut 5/16-18
15	712-04064	Flange Lock Nut 1/4-20
16	712-04065	Nut
17	712-05160	Lug Nut 7/16-14
18	714-04040	Bow Tie Cotter Pin 1/4-5/16
19	926-0324	Fuel Hose Clamp
20	727-05122	Damper Cylinder .870 OD
21	732-05390	Extension Spring .75 DIA. X 6.85
22	732-05475	Extension Spring .38 OD x 2.00 Lg

Ref.	Part Number	Description
23	736-0371	Thrust Washer
24	747-06172	Engine Keeper Rod
25	737-04342	90 Degree Nylon Fitting
26	737-05023	Extension Fitting 9/16-18
27	738-04162C	Shoulder Spacer
28	738-04251A	Support Tube Rod
29	738-05034	Shoulder Screw .395 Dia x .56 Lg
30	747-06074	Idler Spring Hook
31	747-06559A	Bypass Rod
32	748-05029A	Shoulder Spacer
33	750-06147A	Transmission Spacer .75OD x 11.31
34	751-0588-30	Fuel Line 1/2 ID"
35	751-15123	Expansion Hose
36	954-04317A	Transmission Drive Belt A x 67
37	756-05001A	Electric PTO Pulley
38	756-05042	Idler Pulley 4.25 DIA
39	783-08389	Idler Pulley Cap
40	634-05299	Wheel Assembly, 23 x 10.5-12
41	934-0255	Tubeless Valve
42	734-05116-0901	Tire 23 x 10.5 x 12 Turf Master
43	634-05297	Rim Assembly

Deck Lift Assembly

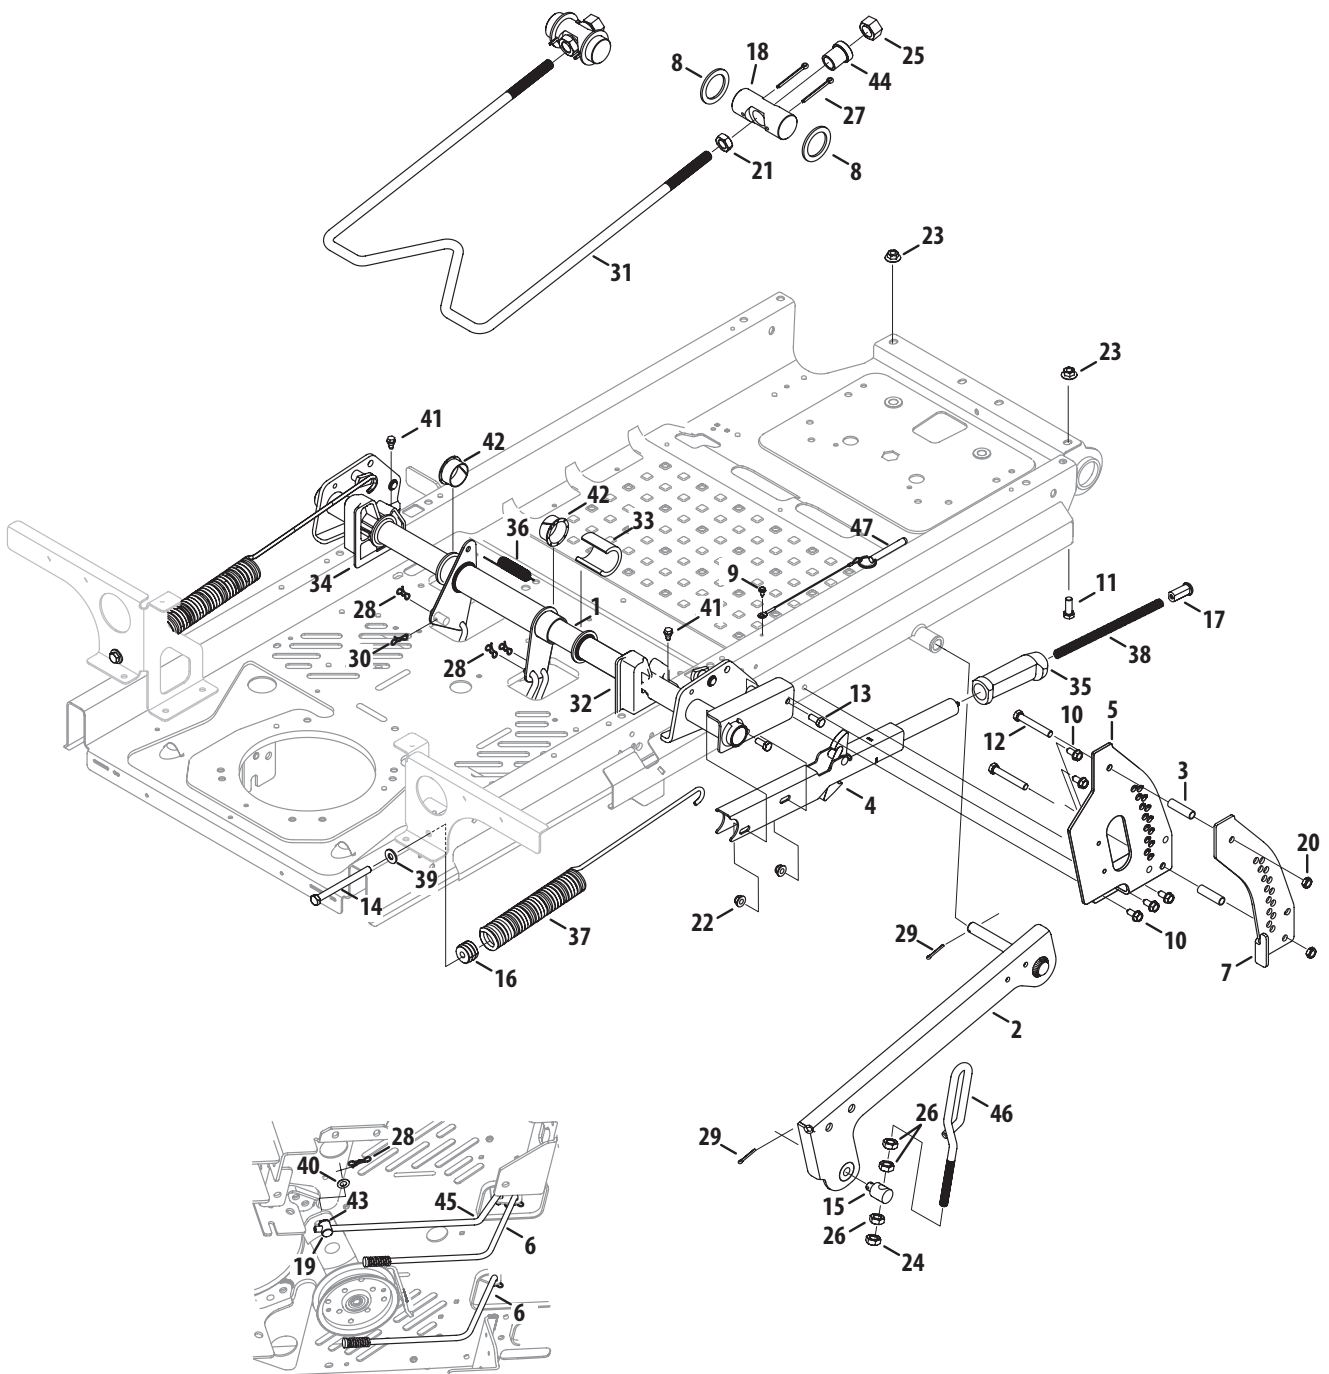


Deck Lift Assembly

Ref.	Part Number	Description
1	603-04973A	Deck Lift Shaft Assembly
2	603-05086A	RH Lift Arm
—	603-05087A	LH Lift Arm
3	750-06031	Spacer
4	903-05143A	Latch Handle Assembly
5	603-05208A	Lift Bracket Assembly
6	647-05027	Brake Rod Assembly
7	703-09936	Outer Index Bracket
8	703-10475	Flat Spacer, 2.18 x 1.567 x .127
9	910-0224	Hex Screw AB-Tap #10-16 x 0.500
10	710-04484	Screw 5/16-18 x .750
11	710-0514	Screw 3/8-16 x 1 GR5
12	710-0859	Hex Screw-3/8-16 x 2.5 GR5
13	710-3008	Screw 5/16-18 x .75 GR5
14	710-3279	Screw 3/8-16 x 4.25 GR5
15	711-06284	Lift Link Ferrule
16	711-0635	Spring Insert
17	711-0642A	Lift Handle Button
18	711-06591	Lift Pin
19	911-0832	Ferrule 3/8-24 x .375
20	712-0266A	Jam Lock Nut
21	712-0301	Jam Nut, 3/4-10
22	712-04063	Flange Lock Nut 5/16-18
23	712-04217	Flange Lock Nut


Ref.	Part Number	Description
24	712-05046	Hex Nut Nylock 1/2-13
25	712-05154	Nut, 3/4-10, Nylock
26	912-3048	Hex Nut
27	714-0211	Cotter Pin
28	714-04040	Bow Tie Cotter Pin 1/4-5/16
29	914-0470	Cotter Pin
30	714-05005	Bow Tie Cotter Pin
31	747-06644A	Deck Front Hanger Rod
32	731-09683	Deck Lift Bracket
33	731-09687	Spacer-1.375 Shaft
34	731-09707	LH Deck Lift Bracket
35	731-3158	Lift Handle Grip
36	732-04587	Extension Spring .63 x 4.95
37	732-05096	Extension Spring
38	732-3097	Compression Spring
39	736-0262	Flat Washer .385 x .870 x .090
40	936-0314	Washer Thrust .375 x .70 x .030
41	738-04278	Shoulder Screw 1/4-20 x .50 19
42	741-05059	Flange Bearing
43	741-05170	Flange Bearing
44	741-05195	Flange Bearing
45	747-05592B	Disengagement Brake Rod
46	747-06259A	Lift Adjustment Link
47	747-06355	Lock Rod

Engine Accessories (Kohler)

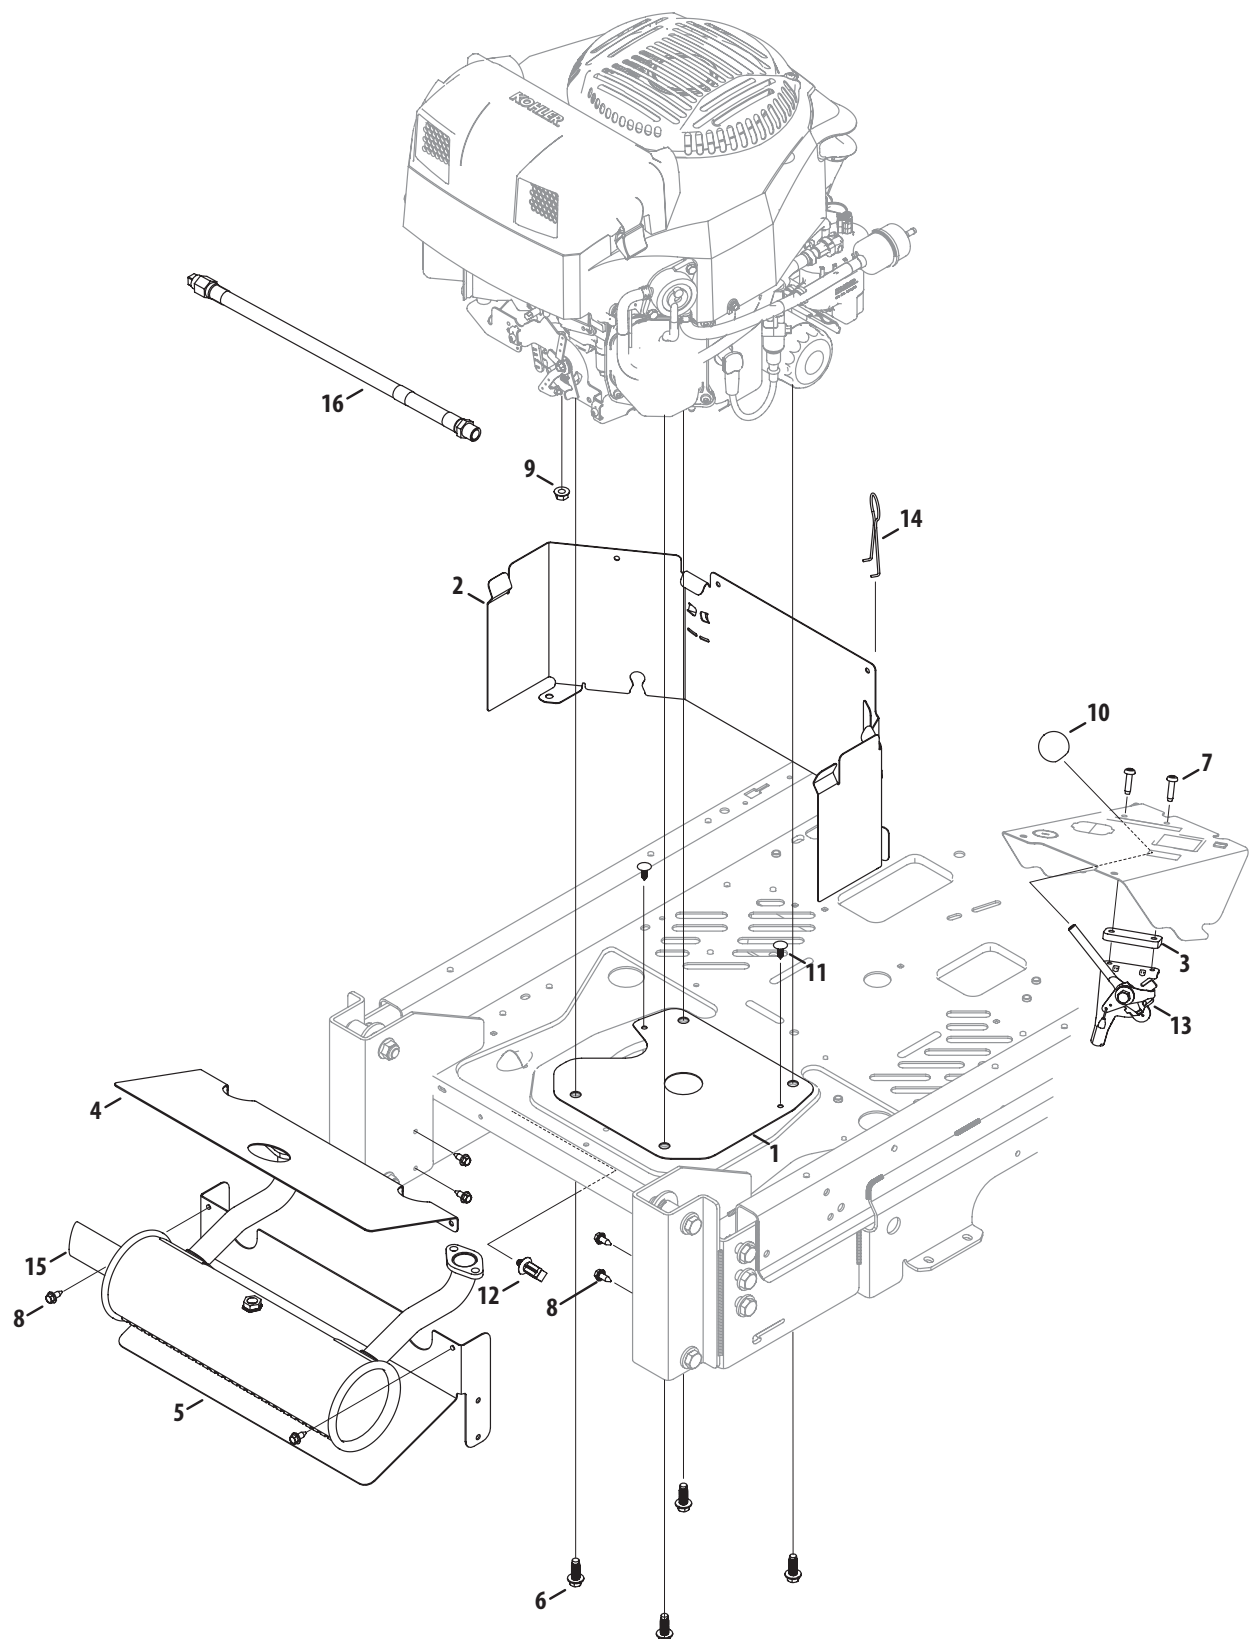

Ref.	Part Number	Description
1	703-09796	Engine Shield Plate
2	703-10278	Engine Shield Bracket
3	703-10399	Throttle Cable Spacer
4	703-10416	Muffler Shield-Top
5	703-10417	Muffler Shield-Bottom
6	710-04683C	Screw 3/8-16 x 1
7	710-05074	Screw 1/4-20 x 1.0
8	710-1652	Screw 1/4-20 x .625
9	712-3086	Flange Nut, M8 x 1.25
10	720-05110	Ball Knob
11	726-3046	Ratchet Clip .250
12	731-10746A	Drain Hose Clip
13	946-05260	Throttle Cable 59"
14	747-06306	Tank Support Rod
15	751-15124A	Round Twin Muffler
16	751-15323	Oil Drain Hose


48" Deck

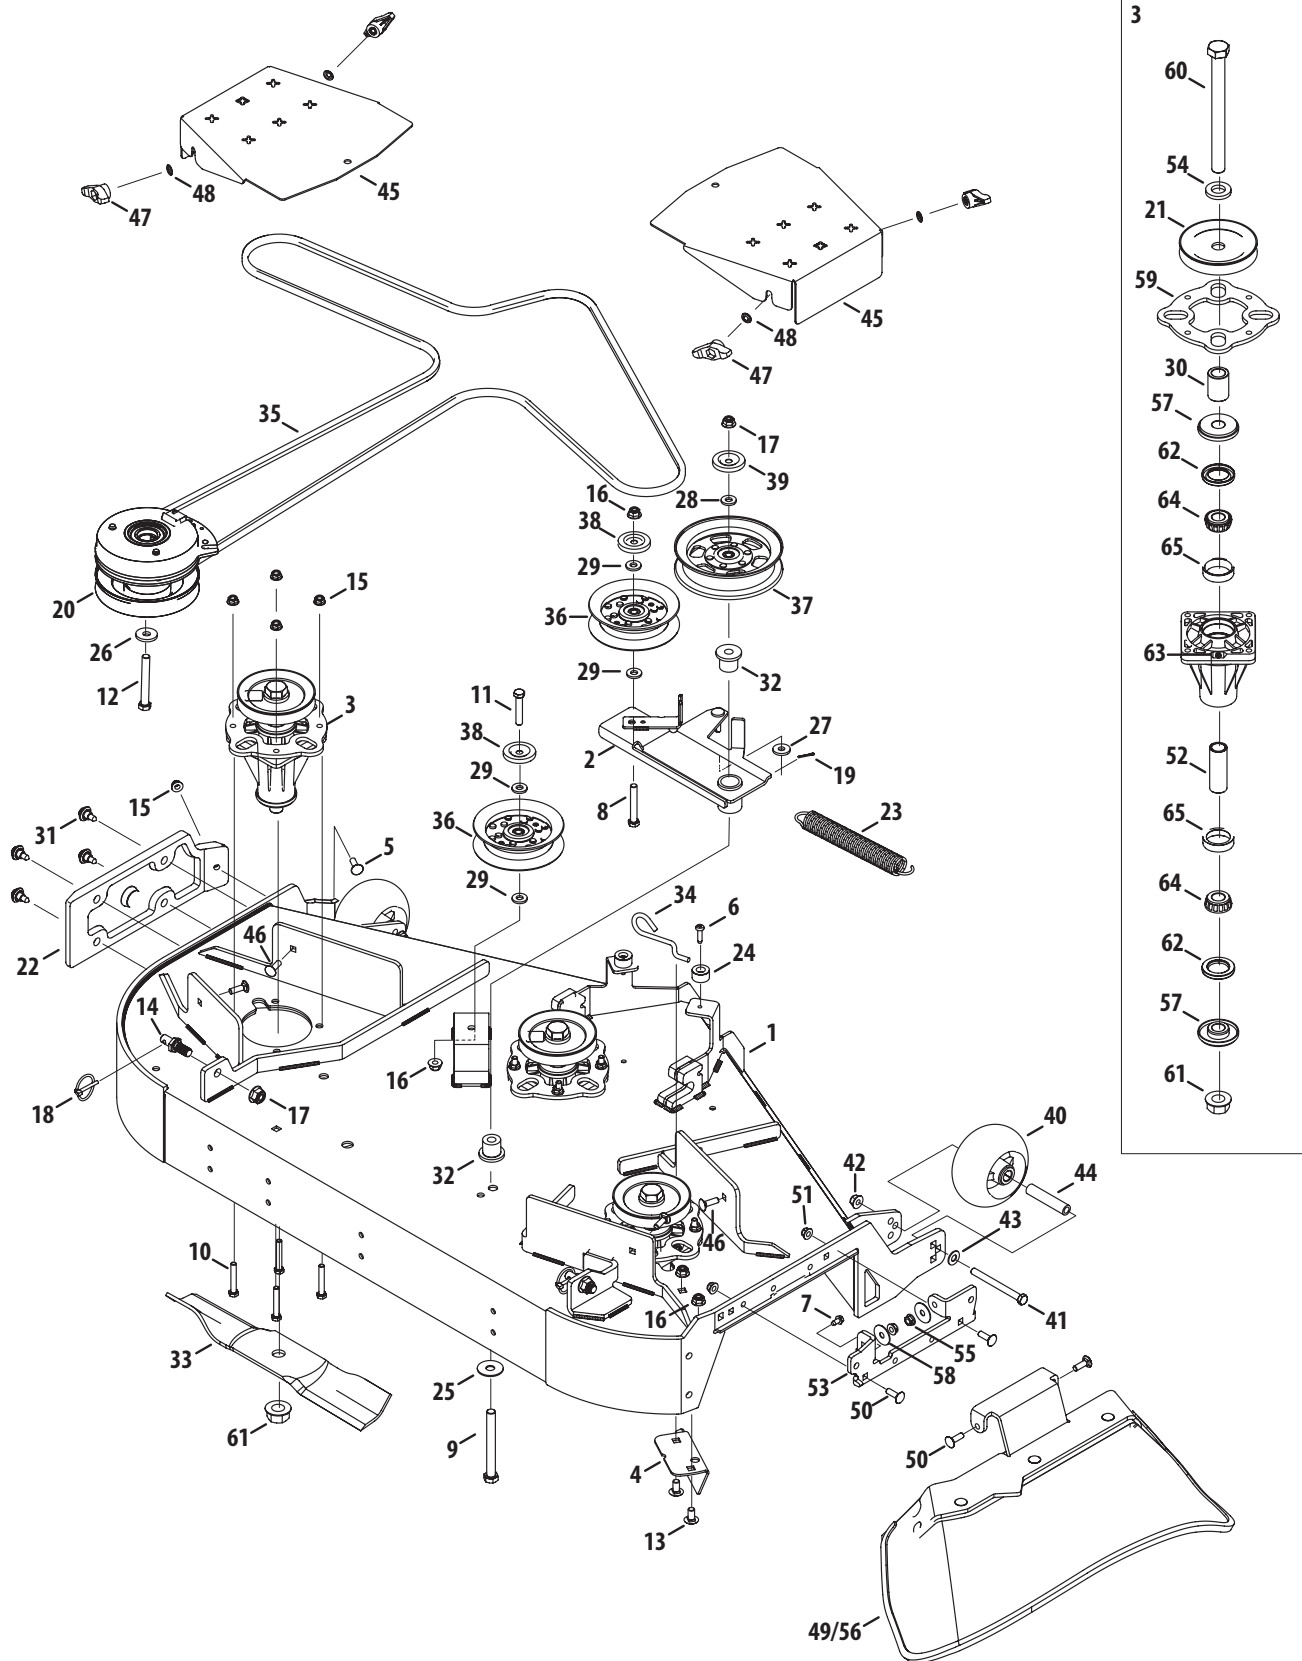


Ref.	Part Number	Description
1	603-05268A	48" Fab Deck Assembly
2	603-05284	Idler Arm Assembly
3	918-07256	Spindle Assembly
4	703-09435	Deck Chute Baffle
5	710-0276	Carriage Bolt 5/16-18 x 1.00
6	710-05074	Screw 1/4-20 x 1.0
7	710-0599	Screw 1/4-20 x .500
8	710-0859	Hex Screw-3/8-16 x 2.5 GR5
9	710-1807	Screw 1/2-13 x 4.5 GR 5
10	710-3103	Screw 5/16-18 x 2.0 GR5
11	710-3144	Screw 3/8-16 x 2.0 GR5
12	710-3157A	Screw 7/16-20 x 3.25 GR5
13	710-3178	Carriage Bolt 3/8-16 x .75
14	711-06200B	Deck Pin
15	712-04063	Flange Lock Nut 5/16-18
16	712-04065	Nut
17	712-04150	Nut
18	753-04070	Lynch Pin
19	914-0507	Cotter Pin 3/32
20	917-05192	Electric Pto Clutch
21	756-3089	Pulley-4.00 OD
22	731-11926	Deck Skid Plate (LH)
23	732-04927	Extension Spring
24	735-05147	Bumper
25	936-0208	Washer .51 x 1.5 x .07
26	736-0322	Flat Washer .445 x 1.248 x .170
27	936-0344	Flat Washer
28	736-04606	Flat Washer
29	936-3004	Flat Washer
30	750-06145	Spacer
31	738-04091A	Shoulder Screw .43 x .29 x 5/16-18
32	741-05211	Shoulder Spacer
33	942-04417	17" Blade (Hi Lift)

Ref.	Part Number	Description
34	747-05608	Deck Spring Hook
35	954-05012A	Deck Belt A Sec x 137"
36	756-05062	Idler Pulley 4.0
37	756-05213	Idler Pulley 5.0"
38	783-08389	Idler Pulley Cap
39	783-09087	Pully Cap 1/2"
40	634-3159	Wheel Assembly 5"
41	710-0411	Hex Screw 3/8-16 x 4.00
42	712-04065	Nut
43	936-0300	Flat Washer
44	750-3193	Wheel Spacer .38ID x 3.04LG
45	703-10220	Belt Cover
46	710-0276	Carriage Bolt 5/16-18 x 1.00
47	720-04122	Wing Knob 5/16-18
48	726-0201	Push Nut
49	931-05396	Deck Chute Assembly
50	710-0276	Carriage Bolt 5/16-18 x 1.00
51	712-04063	Flange Lock Nut 5/16-18
52	750-06139	Spacer
53	703-10371B	Chute Bracket
54	750-05553	Spacer .812 ID x .218 LG
55	712-3004A	Hex Flange Nut
56	735-05165	Fiber Formed Chute
57	748-3065A	Deck Spindle Spacer
58	736-04639	Washer .355 ID x 1.25 OD x .048
59	703-10572	Spindle Reinforcement Plate
60	710-06120	Screw 3/4-16 x 8.25 GR5
61	712-3078	Hex Flange Nut 3/4
62	921-3018A	Single Lip Seal
63	937-3000	Grease Fitting
64	941-04089	Cone Bearing
65	941-04091	Cup Bearing


54" Deck

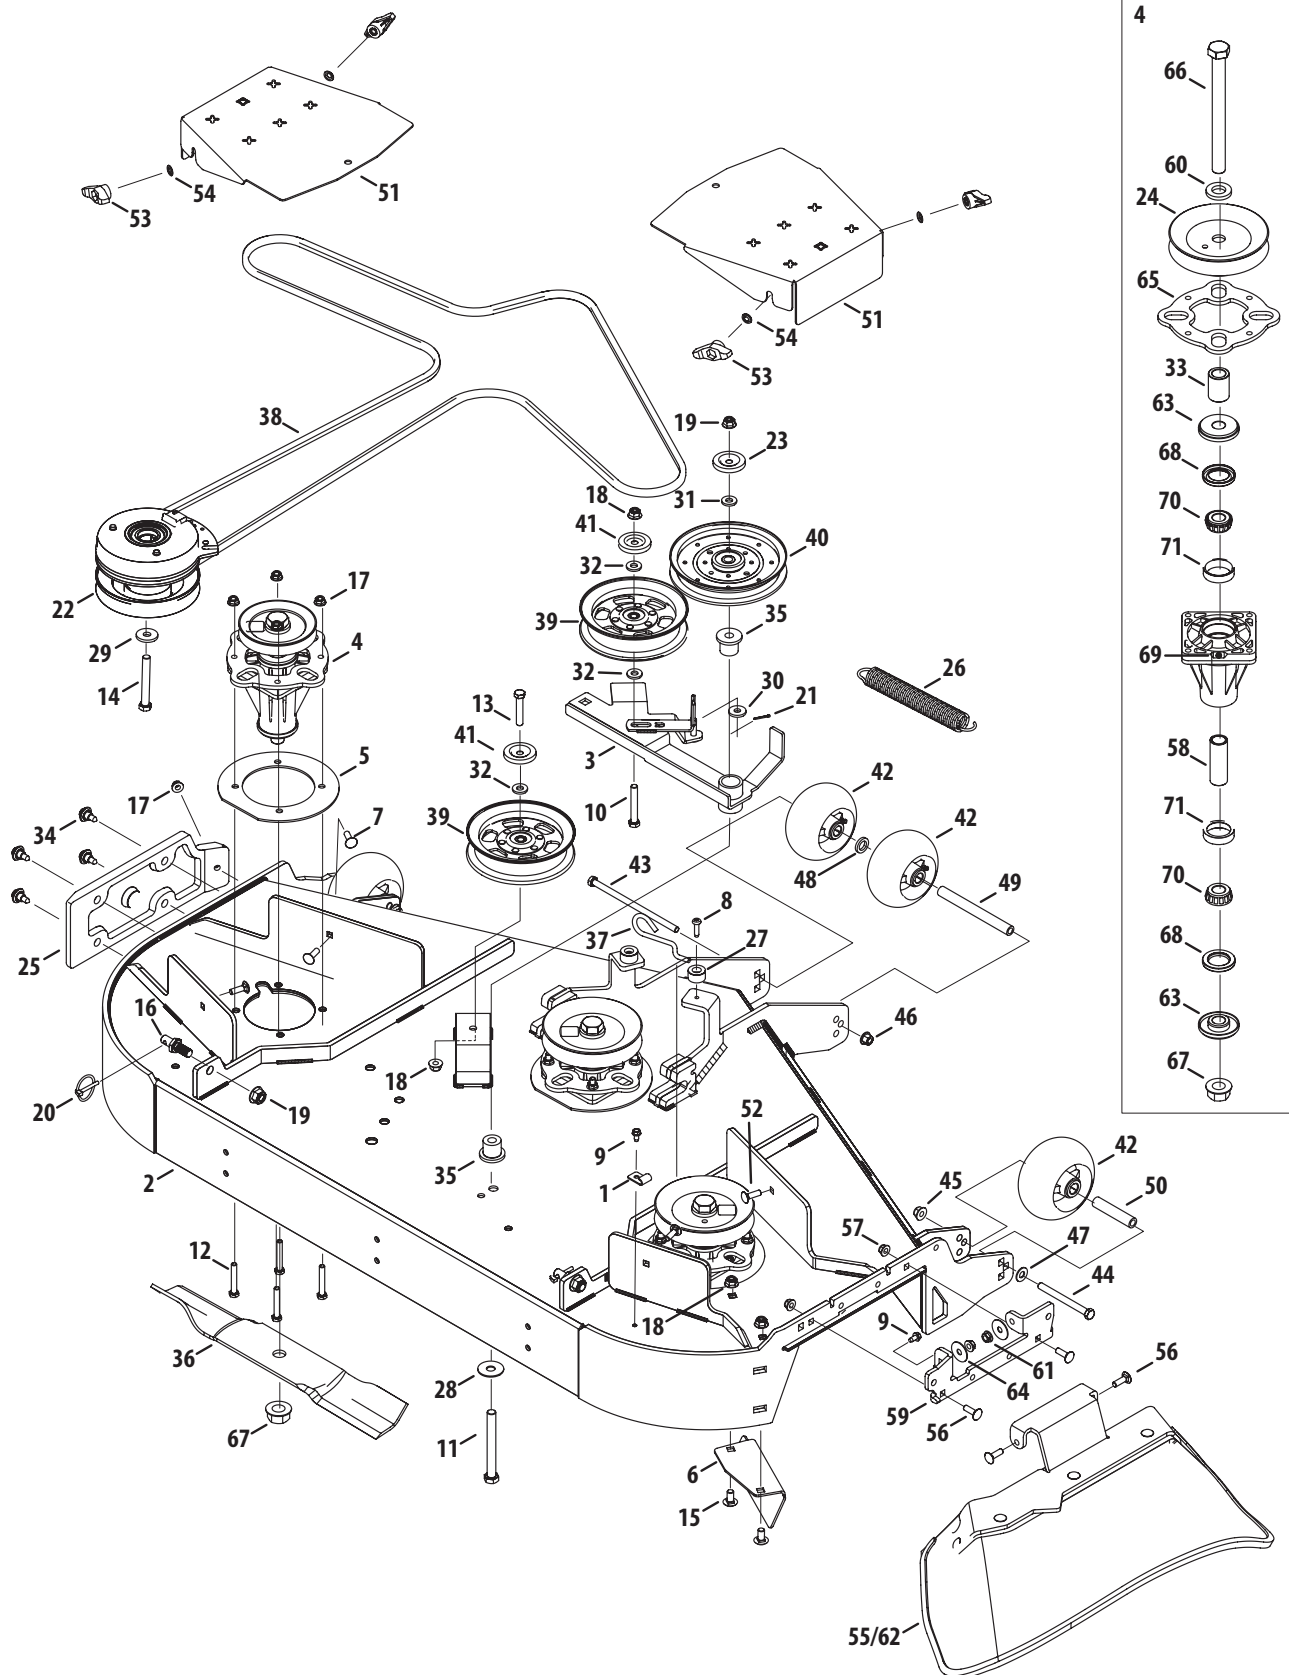

Ref.	Part Number	Description	Ref.	Part Number	Description
1	96606	Hook Retaining Bracket	37	747-05608	Deck Spring Hook
2	603-05269	Deck Assembly	38	954-05013	V-Belt B Sec x 154
3	603-05285	Deck Idler Assembly	39	756-05053	Idler Pulley 5.0
4	918-07255	Spindle Assembly	40	756-05212	Idler Pulley 6.0 Dia"
5	703-07787	Spindle Reinforcement Plate	41	783-08389	Idler Pulley Cap
6	703-09593	Deck Chute Baffle	42	634-3159	Wheel Assembly 5"
7	710-0276	Carriage Bolt 5/16-18 x 1.00	43	710-04692	Screw 3/8-16 x 7.25 GR5
8	710-05074	Screw 1/4-20 x 1.0	44	710-1649	Carriage Bolt 3/8-16 x 4.25 GR5
9	710-0599	Screw 1/4-20 x .500	45	712-04065	Nut
10	710-0859	Hex Screw-3/8-16 x 2.5 GR5	46	712-05007	Nut, 3/8-16, Flange Centerlock
11	710-1807	Screw 1/2-13 x 4.5 GR 5	47	936-0300	Flat Washer
12	710-3103	Screw 5/16-18 x 2.0 GR5	48	736-04296	Flat Washer .632 x 1.00 x .16
13	710-3144	Screw 3/8-16 x 2.0 GR5	49	750-06516	Wheel Spacer
14	710-3157A	Screw 7/16-20 x 3.25 GR5	50	750-3193	Wheel Spacer .38 ID x 3.04 Lg
15	710-3178	Carriage Bolt 3/8-16 x .75	51	703-10099	Belt Cover
16	711-06200B	Deck Pin	52	710-0276	Carriage Bolt 5/16-18 x 1.00
17	712-04063	Flange Lock Nut 5/16-18	53	720-04122	Wing Knob 5/16-18
18	712-04065	Nut	54	726-0201	Push Nut
19	712-04150	Nut	55	931-05396	Deck Chute Assembly
20	753-04070	Lynch Pin	56	710-0276	Carriage Bolt 5/16-18 x 1.00
21	914-0507	Cotter Pin 3/32	57	712-04063	Flange Lock Nut 5/16-18
22	917-05192	Electric PTO Clutch	58	750-06139	Spacer
23	721-04850	Pulley Cap 1/2",1"	59	703-10371B	Chute Bracket
24	756-04459A	V-Pulley 5.768 Dia	60	750-05553	Spacer .812 ID x .218 LG
25	731-11926	Deck Skid Plate (LH)	61	712-3004A	Hex Flange Nut
26	732-04927	Extension Spring	62	735-05165	Fiber Formed Chute
27	735-05147	Bumper	63	748-3065A	Deck Spindle Spacer
28	936-0208	Washer .51 x 1.5 x .07	64	736-04639	Washer .355 ID x 1.25 OD x .048
29	736-0322	Flat Washer .445 x 1.248 x .170	65	703-10572	Spindle Reinforcement Plate
30	936-0344	Flat Washer	66	710-06120	Screw 3/4-16 x 8.25 GR5
31	736-04606	Flat Washer	67	712-3078	Hex Flange Nut 3/4
32	936-3004	Flat Washer	68	921-3018A	Single Lip Seal
33	750-06145	Spacer	69	937-3000	Grease Fitting
34	738-04091A	Shoulder Screw .43 x .29 x 5/16-18	70	941-04089	Cone Bearing
35	741-05211	Shoulder Spacer 1.050 x .503 x 1.079	71	941-04091	Cup Bearing
36	942-04416	19" Blade (Hi Lift)			

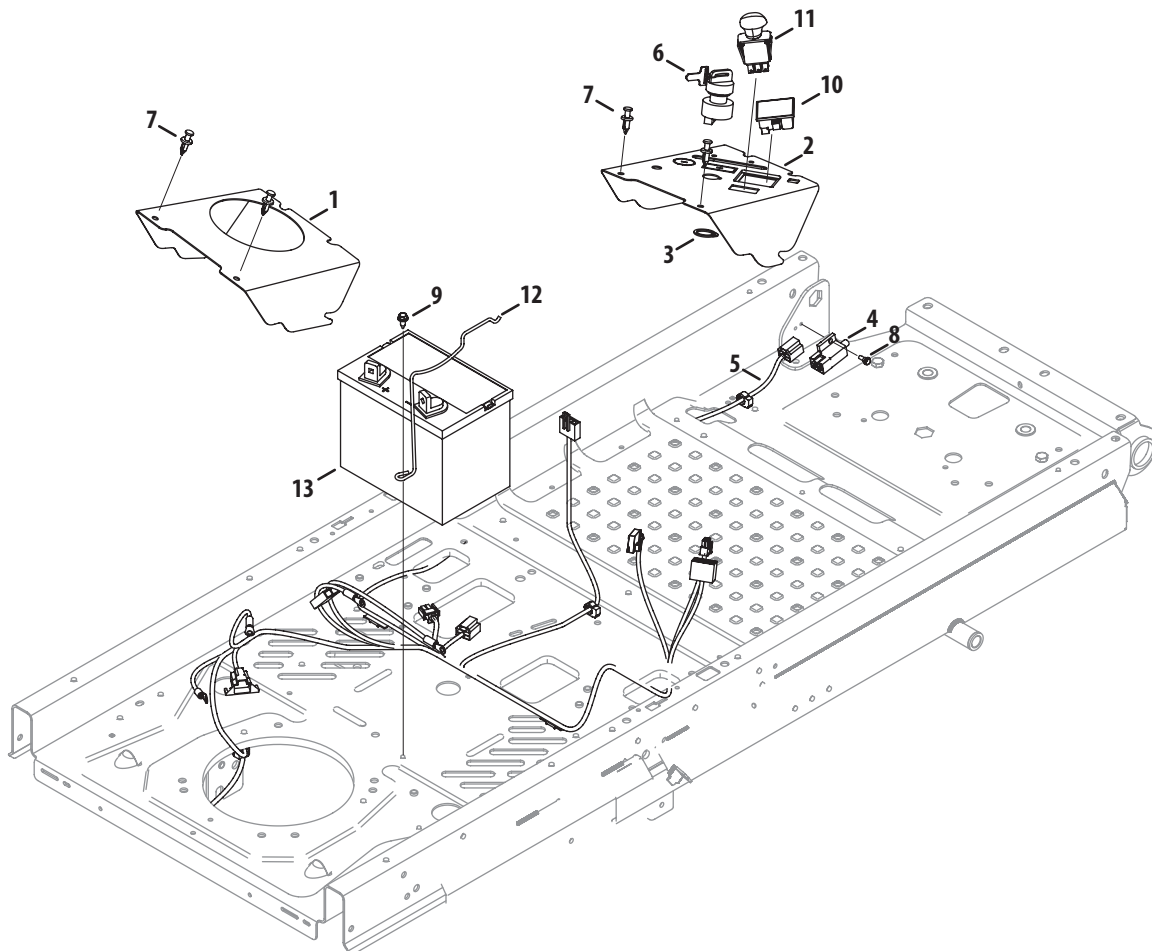


Ref.	Part Number	Description
1	703-09338A	LH Console Cover
2	703-10283A	RH Console Cover
3	703-10377	Spacer
4	725-04363	Interlock Switch (NO/NC)
5	925-06506	Harness
6	925-3277	Ignition Switch
7	728-0199	Plastic Rivet
8	738-04237A	Soulder Screw
9	710-1652	Screw 1/4-20 x .625
10	925-06170	Hour/SVC Meter
11	925-3233	PTO Switch
12	747-05685	Battery Retainer
13	925-1707D	Battery

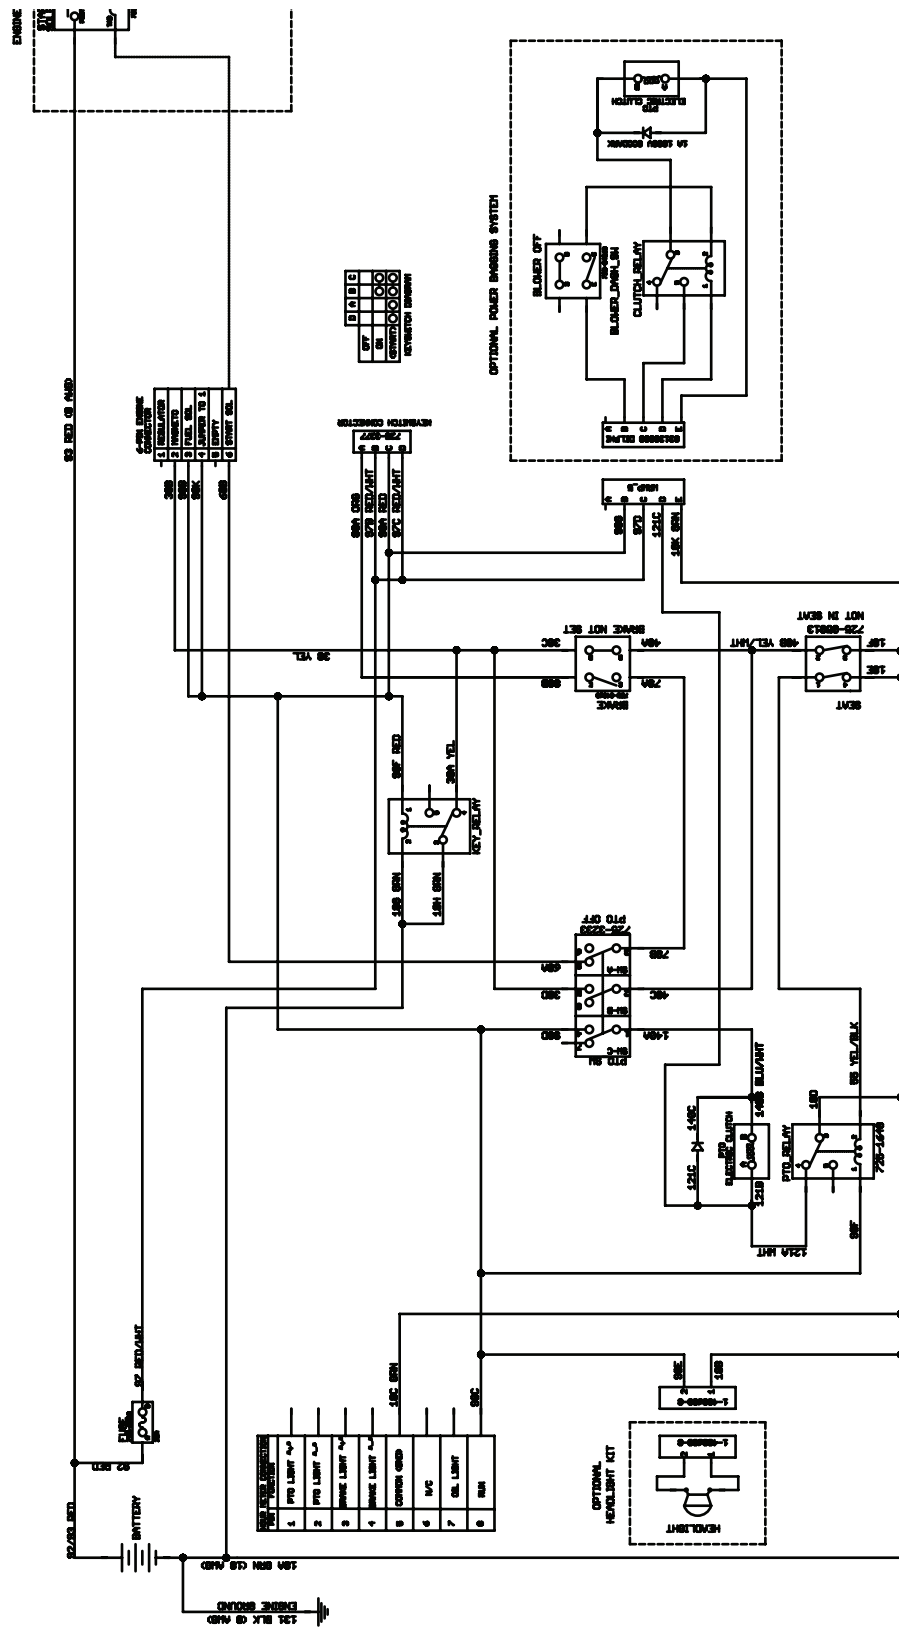

Labels

777I25016

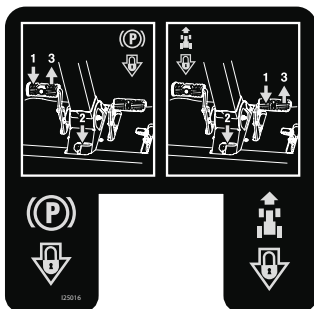


777I25177



777D21262




777I25421

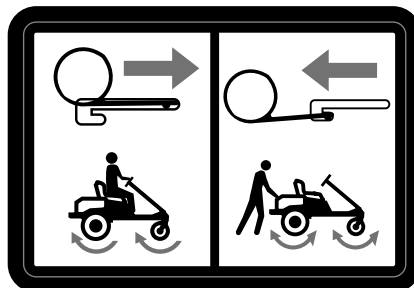


777I25281



777I25494

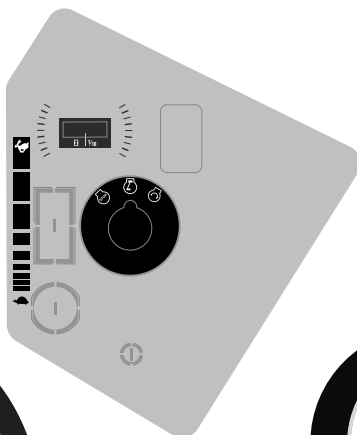

777I25178

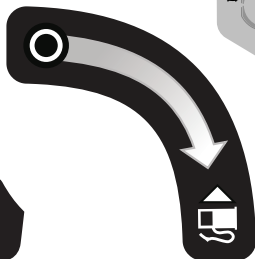


777X45654




777X40182



777D16533

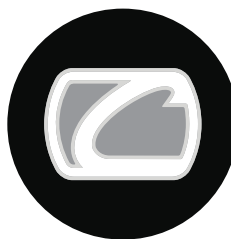

777S35375

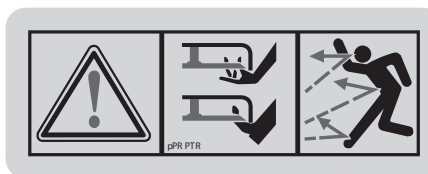


777D21462




777S35766




777S35730

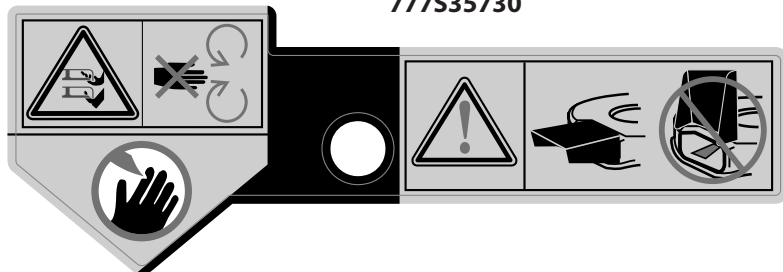

777S35771

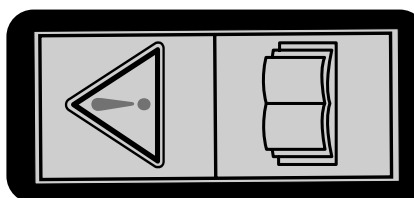

777S35376

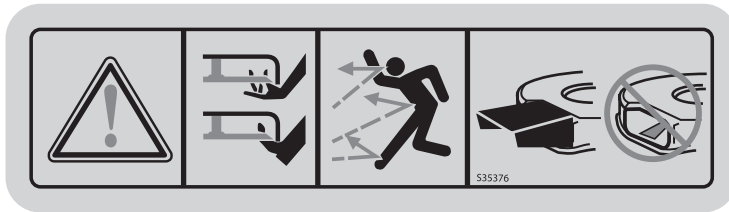

777D21241



777D21468



777S35581



777S35772



777S35738



777D21837



777D21838



[illegible]

[illegible]



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
